


Quick Deployment Guide for Sentry PODS Solar Skid Unit

1. **Stand Panels Up** – Pull pop lock pin and lock it out on both sides.
2. **Push up panels** – Pull stabilizing bar towards you till the pop lock pins make holes on both sides. Lock in.

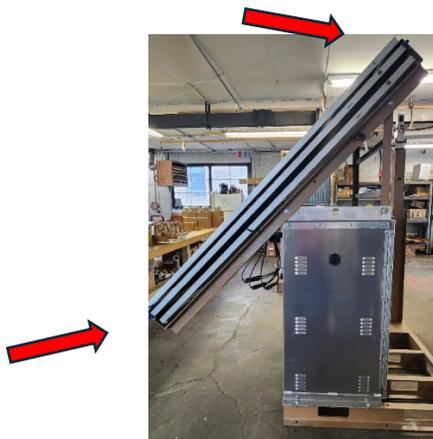


3. **Deploy Panels** – Easy to release levers, start with top first then the bottom & pull panels out on both sides.



4. **Open Box** – Use locking bar at bottom to keep the door open.

5. **Supplies** – In an empty battery bin there will be the mast wench handle, cable tethers & how to guide.

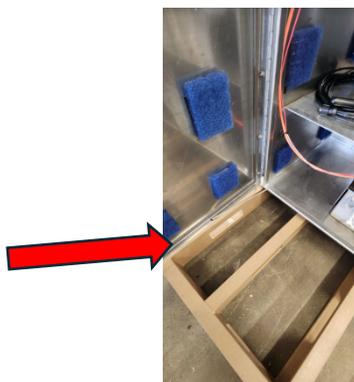

6. **Mast Wench** – Put the mast wench on by matching the screws to the indents & screw tight.



7. **Cable Tethers** – Unscrew cap and screw on the tethers to the cable hanging from the camera. Repeat for second camera & or speaker.

8. **Cable Guide** – Pull both cable tethers through the cable guide.



9. **Mast Up** – Crank up the mast. **WATCH** to make sure connectors on tethers do not catch when mast goes up.

10. **Full Extension of Mast** – When raising the mast **STOP** at red line on side of mast.



11. **Cable Tethers** – Unscrew cap on side of box & screw in cable tether. Repeat for second camera & or speaker.

12. **Breakers** – Starting with the left & moving towards the right, flip on the breakers.



13. System is Starting Up – Unlock the bar, close door & latch.

***The door will not latch properly if the unit is not level on the ground.**

***It is best practice to remove mast wench & store in box.**